

# **SFR Series**

## **Water Flow Regulators**

Date: Jul, 2012

Version: Ver.A (English)





## Contents

<b>1. General Description .....</b>	<b>5</b>
1.1 Coding Principle .....	6
1.2 Feature .....	6
1.3 Technical Specifications.....	8
1.3.1 SFR Series Outline Dimensions .....	8
1.3.2 SFR Series Technical Parameters.....	9
1.4 Safety Regulations .....	10
1.4.1 Safety Signs and Labels .....	10
1.5 Exemption Clause .....	10
<b>2. Structure Characteristics and Working Principle .....</b>	<b>11</b>
2.1 Working Principle of SFR .....	11
2.1.1 System Flow .....	11
2.2 Assembly Drawing .....	12
2.2.1 Assembly Drawing (SFR-200) .....	12
2.2.2 Parts List (SFR-200).....	13
2.2.3 Assembly Drawing (SFR-400) .....	14
2.2.4 Parts List (SFR-400).....	15
2.2.5 Assembly Drawing (SFR-600) .....	16
2.2.6 Parts List (SFR-600).....	17
2.2.7 Assembly Drawing (SFR-800) .....	18
2.2.8 Parts List (SFR-800).....	19
2.2.9 Assembly Drawing (SFR-1000) .....	20
2.2.10 Parts List (SFR-1000).....	21
2.2.11 Assembly Drawing (SFR-1200) .....	22
2.2.12 Parts List (SFR-1200).....	23
<b>3. Installation and Debugging.....</b>	<b>24</b>
3.1 Installation Notice .....	24
<b>4. Operation Guide .....</b>	<b>26</b>
4.1 Flowrate Adjusting.....	26
<b>5. Trouble-shooting .....</b>	<b>27</b>

<b>6. Maintenance and Repair .....</b>	<b>28</b>
6.1 Clean the Furring .....	28
6.2 Maintenance Schedule.....	29
6.2.1 About the Machine.....	29
6.2.2 Installation Check .....	29
6.2.3 Daily Check .....	29
6.2.4 Weekly Check.....	29

### Table Index

Table 2-1: Parts List (SFR-200) .....	13
Table 2-2: Parts List (SFR-400) .....	15
Table 2-3: Parts List (SFR-600) .....	17
Table 2-4: Parts List (SFR-800) .....	19
Table 2-5: Parts List (SFR-1000) .....	21
Table 2-6: Parts List (SFR-1200) .....	23

### Picture Index

Picture 1-1: Series Outline Dimensions.....	8
Picture 1-2: Chart.....	9
Picture 2-1: System Flow .....	11
Picture 2-2: Assembly Drawing (SFR-200) .....	12
Picture 2-3: Assembly Drawing SFR-400).....	14
Picture 2-4: Assembly Drawing (SFR-600) .....	16
Picture 2-5: Assembly Drawing (SFR-800) .....	18
Picture 2-6: Assembly Drawing (SFR-1000) .....	20
Picture 2-7: Assembly Drawing (SFR-1200) .....	22
Picture 3-1: Installation Notice .....	24
Picture 4-1: Flowrate Adjusting .....	26

# 1. General Description




Read this manual carefully before operation to prevent damage of the machine or personal injuries.

SFR series water flow regulators are designed to work with mould heaters, water chillers and cooling towers, which can be connected to more than one mould connectors. They have the function like temperature and flowrate displays, flowrate control in order to meet the requirement of different working conditions. Modularized combination ensures convenient installation and maintenance. It is a necessary device for modern plastic industry to improve its moulding efficiency.



Model: SFR-600

## 1.1 Coding Principle

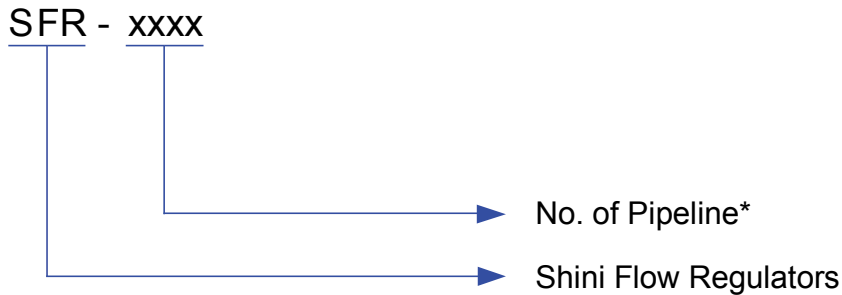

Note: \*

For example: SFR-200, 2 pipelines  
SFR-1000, 10 pipelines

## 1.2 Feature

Standard configuration

- 1) Modularized design and great expandability, which can be configured on client's demand.
- 2) Optimal structure design, longer service life.
- 3) Flowrate is adjustable according to different demand and has temperature and flowrate display function, which can display immediately whenever there is clogging in the mould circulation loops so as to avoid producing defective products.
- 4) Ensure the conformity of product's shrinkage by accurate and reliable mould temperature control.
- 5) Convenient for both mounting and demounting, easy for cleaning and maintenance.
- 6) Purely mechanical structure with no power consumption.
- 7) Viewable flowrate display helps fast adjusting to required rate.
- 8) Adopts precise adjusting valve, which can adjust the flowrate more accurately.
- 9) Mould connectors (3/8" male quick-release connector) are supplied as standard. For connecting with other sizes, they can be unscrewed to leave 3/8" PT female threads.
- 10) Cleaning brush is supplied as standard for easy maintenance of flow tubes.
- 11) Water connection elbows with quick-release connectors (3/8", 1/2", 3/4" and 1"), and machine mounting bracket are optionally available.

All service work should be carried out by a person with technical training or corresponding professional experience. The manual contains instructions for both handling and servicing. Chapter 6, which contains service instructions intended for service engineers. Other chapters contain instructions for the daily operator.

Any modifications of the machine must be approved by SHINI in order to avoid personal injury and damage to machine. We shall not be liable for any damage caused by unauthorized change of the machine.

Our company provides excellent after-sales service. Should you have any problem during using the machine, please contact the company or the local vendor.

Headquarter and Taipei factory:

Tel: (886) 2 2680 9119

Shini Plastics Technologies (Dongguan), Inc:


Tel: (86) 769 8111 6600

Shini Plastics Technologies India Pvt.Ltd.:

Tel: (91) 250 3021 166

## 1.3 Technical Specifications

### 1.3.1 SFR Series Outline Dimensions

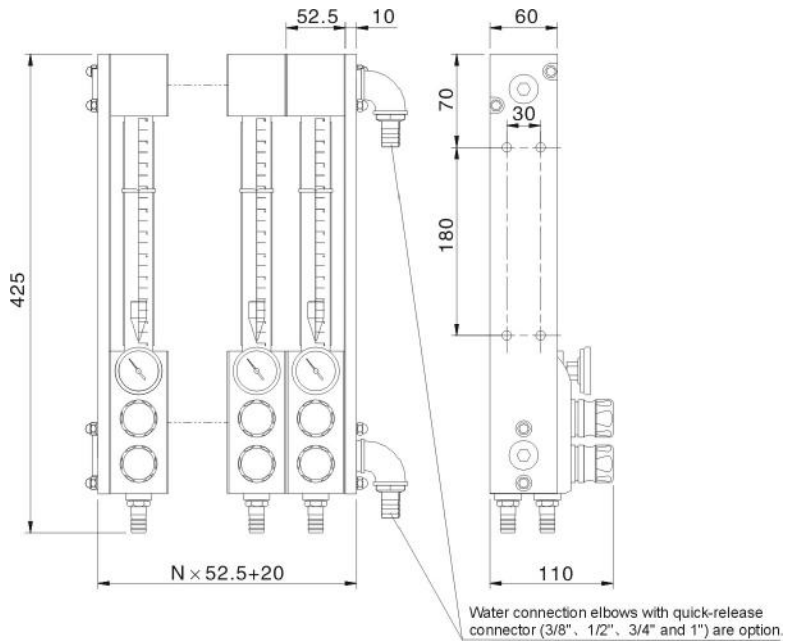

Picture 1-1: Series Outline Dimensions

Table 1-1: Model

Model	Pipe No. (N)
SFR-200	2
SFR-400	4
SFR-600	6
SFR-800	8
SFR-1000	10
SFR-1200	12

### 1.3.2 SFR Series Technical Parameters


Max. Temperature: 100°C (210°F)

Max. Pressure: 10 bar

Flowrate range: 0 ~ 18 ltr. / Min (each)

Mould connectors: 3 / 8" quick-release

Water connectors: 3 / 4" PT female thread

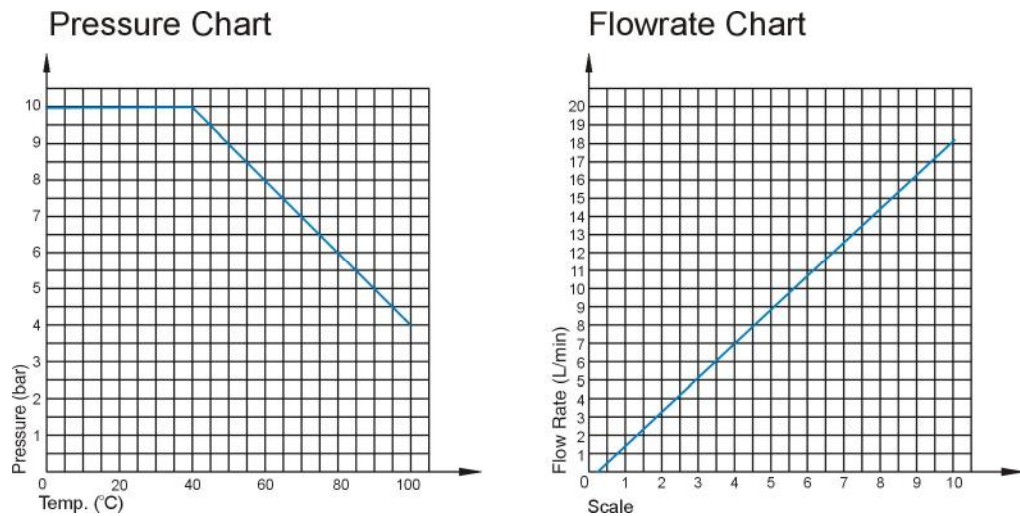

Picture 1-2: Chart

## 1.4 Safety Regulations

Strictly abide by the following safety regulations to prevent damage of the machine or personal injuries.

### 1.4.1 Safety Signs and Labels



Warning! Danger!

Take great care when this sign appears !



Attention!

No need for regular inspection because all the electrical parts in the control unit are fixed tightly!

## 1.5 Exemption Clause

The following statements clarify the responsibilities and regulations born by any buyer or user who purchases products and accessories from Shini (including employees and agents).

Shini is exempted from liability for any costs, fees, claims and losses caused by reasons below:


1. Any careless or man-made installations, operation and maintenances upon machines without referring to the Manual prior to machine using.
2. Any incidents beyond human reasonable controls, which include man-made vicious or deliberate damages or abnormal power, and machine faults caused by irresistible natural disasters including fire, flood, storm and earthquake.
3. Any operational actions that are not authorized by Shini upon machine, including adding or replacing accessories, dismantling, delivering or repairing.
4. Employing consumables or oil media that are not appointed by Shini.

## 2. Structure Characteristics and Working Principle

### 2.1 Working Principle of SFR

- 1) Circulating water comes into flow regulator via water inlet.
- 2) Then the circulating water comes into mould via the adjusting valve "1".
- 3) After the circulating water completing its circulating in the mould, it will go back to the flow tubes via the flow regulator's return water inlet and the adjusting valve "2". Flowrate can be observed in the flow tubes.
- 4) Circulating water returns to the mould temperature controllers, water chillers or cooling tower via water outlet.
- 5) Thermometer displays the temperature of pipe flow.


#### 2.1.1 System Flow

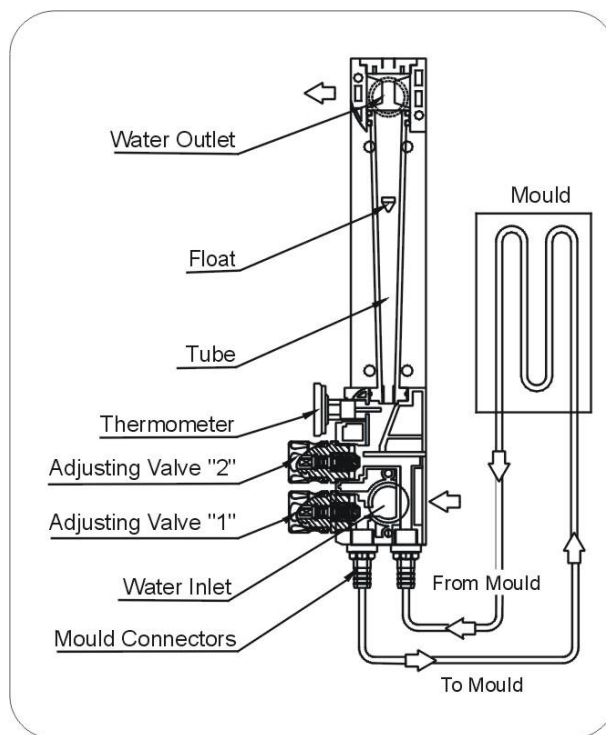

Picture 2-1: System Flow

## 2.2 Assembly Drawing

### 2.2.1 Assembly Drawing (SFR-200)

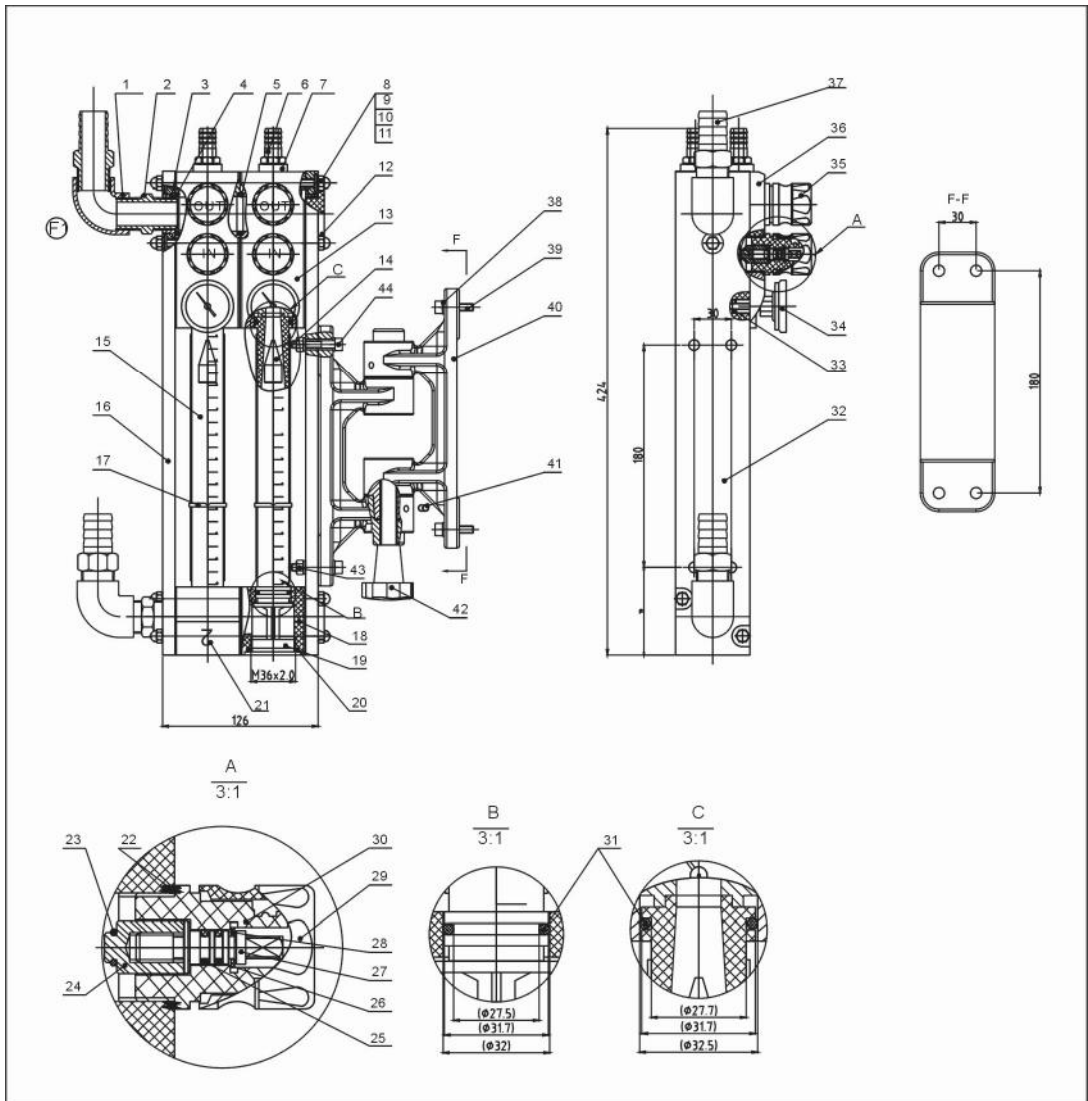

Technical requirements:

1. No mixed use of various O type rings is allowed in assembling.
2. Face direction is that the pointed end faces valve body.
3. Zero installation graduation of transparent collet is on valve body.
4. Test water and find out no water leakage in every sealing place after assembling in accordance with regulations.
5. Adjust knob, flexible and reliable.

Remarks: please refer to material list 2.2.2 for specific explanation of the Arabic numbers in parts drawing.

Picture 2-2: Assembly Drawing (SFR-200)


## 2.2.2 Parts List (SFR-200)

Table 2-1: Parts List (SFR-200)

No.	Name	Part No.	No.	Name	Part No.
1	3 / 4" Stainless steel elbow (selective matching )	YW53030400000	25	O type seal ring 7	YR20052500000
2	3 / 4" Copper connection with external teeth at the two ends (Selective matching)	BH12030400010	26	O type seal ring 4	YR20062000000
3	Fixing ring of plinth	BH12040000710	27	Regulator inner lever	YW05040000300
4	O type seal ring 1	YR20283500000	28	Split washer	YW66000600000
5	Rectangular seal ring	YR20401000000	29	Regulator screw cap (IN)	YR40000000700
6	3 / 8" Pipe's connection	YW04135300000	30	Regulator fixing seat	YR40000000500
7	Valve body attachment's internal race	BH12400001210	31	O type seal ring 2	YR20273000000
8	Full double-screw bolt	BH10624000010	32	Right fixing plate	BW20040000410
9	Flap gasket	YW66061800000	33	4" Single-pore rubber plug	YR30000400100
10	Spring washer	YW65006000100	34	Bimetallic thermometer	YE90101100000
11	Acorn nut	YW64006000100	35	Regulator screw cap (OUT)	YR40000000800
12	Seal screw	YR40000000900	36	Lateral mass	YR40000000600
13	Valve body	YR40004000000	37	3 / 4"PT×1/2 copper core (selective matching)	BH12341200010
14	Face	YW04143500000		3 / 4"PT×3/4 copper core (selective matching)	BH12343400010
15	Transparent collet	YR40000001100		3 / 4"PT×1 copper core (selective matching)	BH12340100010
16	Right fixing plate	BW20040000310		3 / 4"PT×3/8 copper core (selective matching)	BH12343800010
17	Collet measuring scale	YW20004700000	38	M8 Tapping screw	YW66081600000
18	Connection base	YR40000001000	39	M8X25 Inner hexagon screw	YW61082500100
19	Screw thread adjustment parts	YR40000001300	40	Water flow distributor support	BW20004700000
20	O type seal ring 6	YR20363000000	41	M6×12×3 locating screw at notching cylinder end	YW64006000100
21	Number label	YP31010000100 YP31000025900	42	Mini clamp nut (selective matching)	YW09001000000
22	O type seal ring 3	YR20236200000	43	M8 Nut	YW64080600000
23	O type seal ring 5	YR20562600000	44	M8×35 Inner hexagon screw	YW61083500000
24	Regulator block	YW05040000400			

\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested. Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

## 2.2.3 Assembly Drawing (SFR-400)

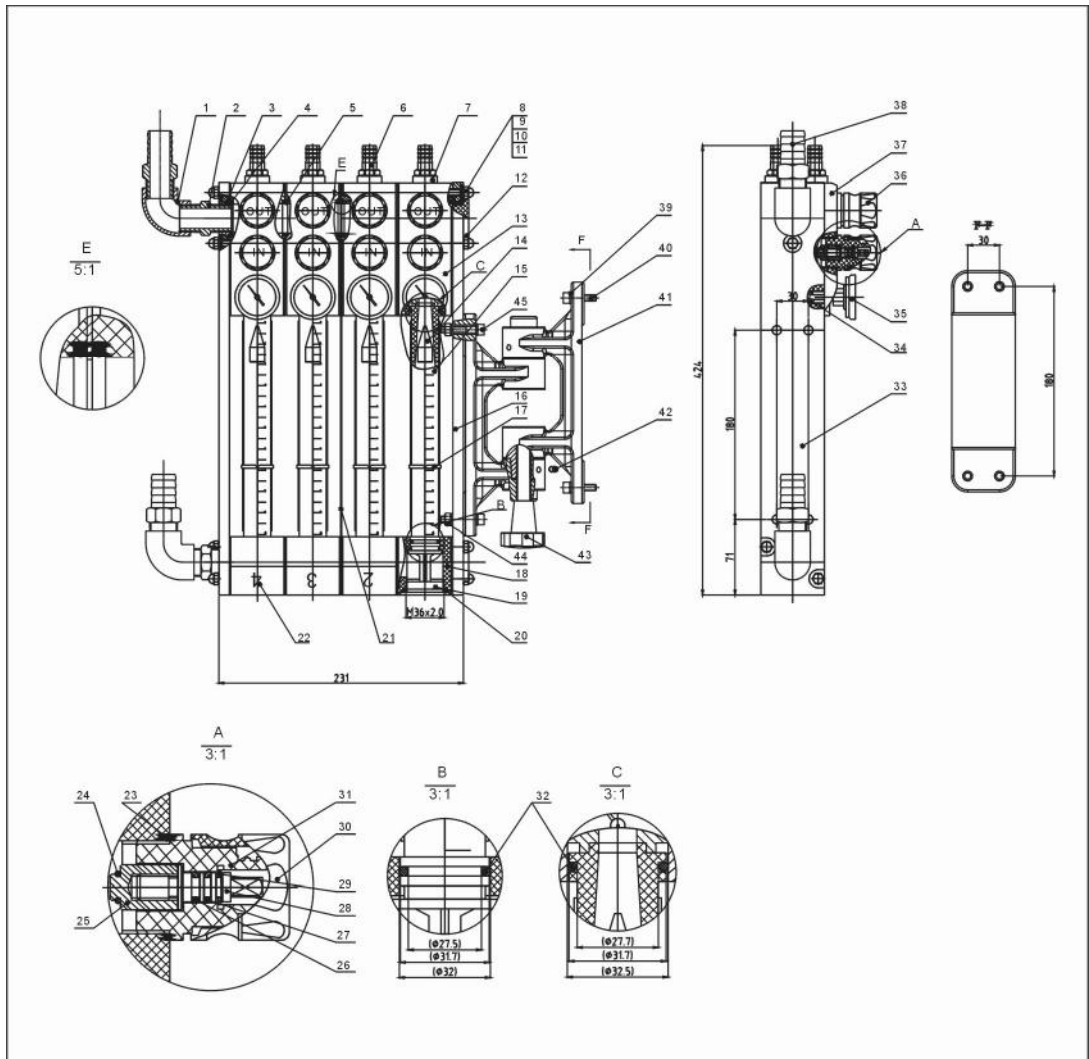

Technical requirements:

1. No mixed use of various O type rings is allowed in assembling.
2. Face direction is that the pointed end faces valve body.
3. Zero installation graduation of transparent collet is on valve body.
4. Test water and find out no water leakage in every sealing place after assembling in accordance with regulations.
5. Adjust knob, flexible and reliable.

Remarks: please refer to material list 2.2.4 for specific explanation of the Arabic numbers in parts drawing.

Picture 2-3: Assembly Drawing SFR-400)


## 2.2.4 Parts List (SFR-400)

Table 2-2: Parts List (SFR-400)

No.	Name	Part No.	No.	Name	Part No.
1	3 / 4" Stainless steel elbow (selective matching )	YW53030400000	25	Regulator block	YW05040000400
2	3 / 4" Copper connection with external teeth at the two ends (Selective matching)	BH12030400010	26	O type seal ring 7	YR20052500000
3	Fixing ring of plinth	BH12040000710	27	O type seal ring 4	YR20062000000
4	O type seal ring 1	YR20283500000	28	Regulator inner lever	YW05040000300
5	Rectangular seal ring	YR20401000000	29	Split washer	YW66000600000
6	3 / 8" Pipe's connection	YW04135300000	30	Regulator screw cap (IN)	YR40000000700
7	Valve body attachment's internal race	BH12400001210	31	Regulator fixing seat	YR40000000500
8	Full double-screw bolt	BH10624000010	32	O type seal ring 2	YR20273000000
9	Flap gasket	YW66061800000	33	Right fixing plate	BW20040000410
10	Spring washer	YW65006000100	34	4" Single-pore rubber plug	YR30000400100
11	Acorn nut	YW64006000100	35	Bimetallic thermometer	YE90101100000
12	Seal screw	YR40000000900	36	Regulator screw cap (OUT)	YR40000000800
13	Valve body	YR40004000000	37	Lateral mass	YR40000000600
14	Face	YW04143500000	38	3 / 4"PT×1/2 copper core (selective matching)	BH12341200010
15	Transparent collet	YR40000001100		3 / 4"PT×3/4 copper core (selective matching)	BH12343400010
16	Right fixing plate	BW20040000310		3 / 4"PT×1 copper core (selective matching)	BH12340100010
17	Collet measuring scale	YW20004700000		3 / 4"PT×3/8 copper core (selective matching)	BH12343800010
18	Connection base	YR40000001000	39	M8 Tapping screw	YW66061200000
19	Screw thread adjustment parts	YR40000001300	40	M8X25 Inner hexagon screw	YW61082500100
20	O type seal ring 6	YR20363000000	41	Water flow distributor support	YW20004700000
21	Clapboard	BL26160500110	42	M6×12×3 locating screw at notching cylinder end	YW64006000100
22	Number label	YP31010000100 YP31010000300	43	Mini clamp nut (selective matching)	YW09001000000
23	O type seal ring 3	YR20236200000	44	M8 Nut	YW64080600000
24	O type seal ring 5	YR20562600000	45	M8×35 Inner hexagon screw	YW61083500000

\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested. Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

## 2.2.5 Assembly Drawing (SFR-600)

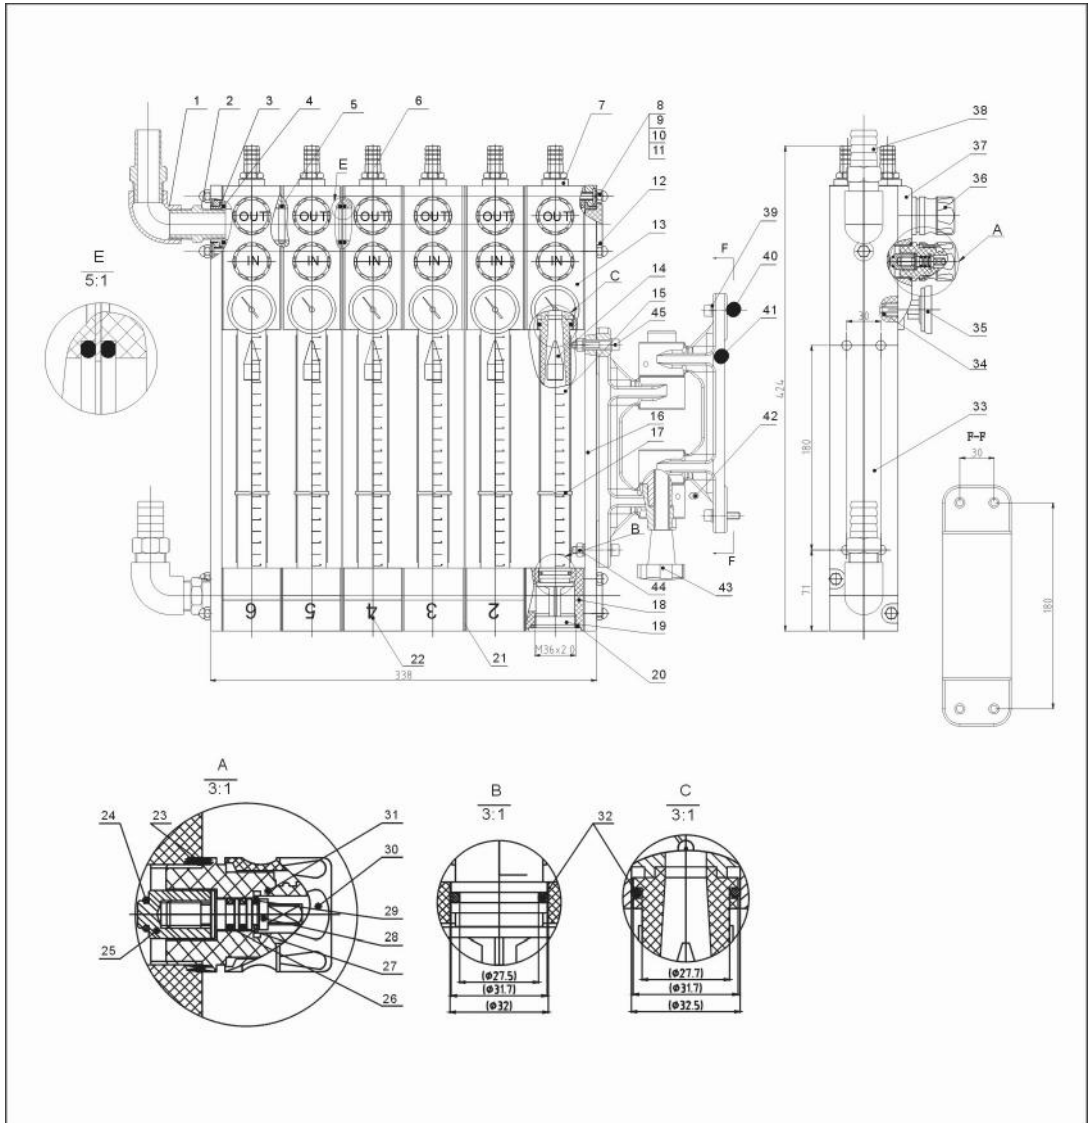

### Technical requirements:

1. No mixed use of various O type rings is allowed in assembling.
2. Face direction is that the pointed end faces valve body.
3. Zero installation graduation of transparent collet is on valve body.
4. Test water and find out no water leakage in every sealing place after assembling in accordance with regulations.
5. Adjust knob, flexible and reliable.

Remarks: please refer to material list 2.2.6 for specific explanation of the Arabic numbers in parts drawing.

Picture 2-4: Assembly Drawing (SFR-600)


## 2.2.6 Parts List (SFR-600)

Table 2-3: Parts List (SFR-600)

No.	Name	Part No.	No.	Name	Part No.
1	3 / 4" Stainless steel elbow (selective matching )	YW53030400000	25	Regulator block	YW05040000400
2	3 / 4" Copper connection with external teeth at the two ends (Selective matching)	BH12030400010	26	O type seal ring 7	YR20052500000
3	Fixing ring of plinth	BH12040000710	27	O type seal ring 4	YR20062000000
4	O type seal ring 1	YR20283500000	28	Regulator inner lever	YW05040000300
5	Rectangular seal ring	YR20401000000	29	Split washer	YW66000600000
6	3 / 8" Pipe's connection	YW04135300000	30	Regulator screw cap (IN)	YR40000000700
7	Valve body attachment's internal race	BH12400001210	31	Regulator fixing seat	YR40000000500
8	Full double-screw bolt	BH10624000010	32	O type seal ring 2	YR20273000000
9	Flap gasket	YW66061800000	33	Right fixing plate	BW20040000410
10	Spring washer	YW65006000100	34	4" Single-pore rubber plug	YR30000400100
11	Acorn nut	YW64006000100	35	Bimetallic thermometer	YE90101100000
12	Seal screw	YR40000000900	36	Regulator screw cap (OUT)	YR40000000800
13	Valve body	YR40004000000	37	Lateral mass	YR40000000600
14	Face	YW04143500000	38	3 / 4"PT×1/2 copper core (selective matching)	BH12341200010
15	Transparent collet	YR40000001100		3 / 4"PT×3/4 copper core (selective matching)	BH12343400010
16	Right fixing plate	BW20040000310		3 / 4"PT×1 copper core (selective matching)	BH12340100010
17	Collet measuring scale	YW20004700000		3 / 4"PT×3/8 copper core (selective matching)	BH12343800010
18	Connection base	YR40000001000	39	M8 Tapping screw	YW66081600000
19	Screw thread adjustment parts	YR40000001300	40	M8X25 Inner hexagon screw	YW61082500100
20	O type seal ring 6	YR20363000000	41	Water flow distributor support	YW20004700000
21	Clapboard	BL26160500110	42	M6×12×3 locating screw at notching cylinder end	YW64006000100
22	Number label	YP31010000100 YP31010000500	43	Mini clamp nut (selective matching)	YW09001000000
23	O type seal ring 3	YR20236200000	44	M8 Nut	YW64080600000
24	O type seal ring 5	YR20562600000	45	M8×35 Inner hexagon screw	YW61083500000

\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested. Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

## 2.2.7 Assembly Drawing (SFR-800)

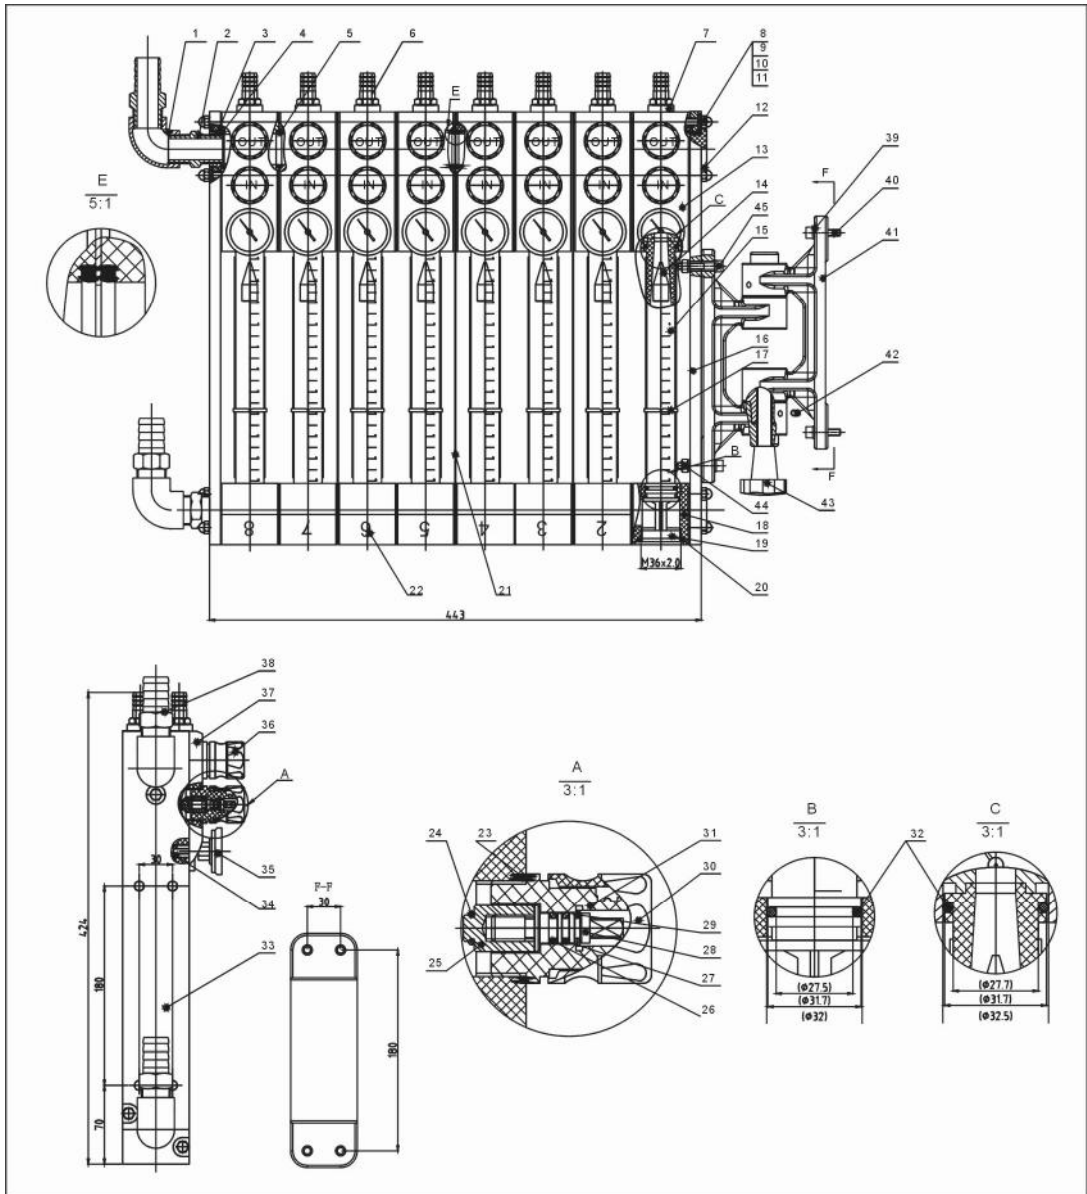

Technical requirements:

1. No mixed use of various O type rings is allowed in assembling.
2. Face direction is that the pointed end faces valve body.
3. Zero installation graduation of transparent collet is on valve body.
4. Test water and find out no water leakage in every sealing place after assembling in accordance with regulations.
5. Adjust knob, flexible and reliable.

Remarks: please refer to material list 2.2.8 for specific explanation of the Arabic numbers in parts drawing.

Picture 2-5: Assembly Drawing (SFR-800)


## 2.2.8 Parts List (SFR-800)

Table 2-4: Parts List (SFR-800)

No.	Name	Part No.	No.	Name	Part No.
1	3 / 4" Stainless steel elbow (selective matching )	YW53030400000	25	Regulator block	YW05040000400
2	3 / 4" Copper connection with external teeth at the two ends (Selective matching)	BH12030400010	26	O type seal ring 7	YR20052500000
3	Fixing ring of plinth	BH12040000710	27	O type seal ring 4	YR20062000000
4	O type seal ring 1	YR20283500000	28	Regulator inner lever	YW05040000300
5	Rectangular seal ring	YR20401000000	29	Split washer	YW66000600000
6	3 / 8" Pipe's connection	YW04135300000	30	Regulator screw cap (IN)	YR40000000700
7	Valve body attachment's internal race	BH12400001210	31	Regulator fixing seat	YR40000000500
8	Full double-screw bolt	BH11080001110	32	O type seal ring 2	YR20273000000
9	Flap gasket	YW66061800000	33	Right fixing plate	BW20040000410
10	Spring washer	YW65006000100	34	4" Single-pore rubber plug	YR30000400100
11	Acorn nut	YW64006000100	35	Bimetallic thermometer	YE90101100000
12	Seal screw	YR40000000900	36	Regulator screw cap (OUT)	YR40000000800
13	Valve body	YR40004000000	37	Lateral mass	YR40000000600
14	Face	YW04143500000	38	3 / 4"PT×1/2 copper core (selective matching)	BH12341200010
15	Transparent collet	YR40000001100		3 / 4"PT×3/4 copper core (selective matching)	BH12343400010
16	Right fixing plate	BW20040000310		3 / 4"PT×1 copper core (selective matching)	BH12340100010
17	Collet measuring scale	YW20004700000		3 / 4"PT×3/8 copper core (selective matching)	BH12343800010
18	Connection base	YR40000001000	39	M8 Tapping screw	YW66081600000
19	Screw thread adjustment parts	YR40000001300	40	M8X25 Inner hexagon screw	YW61082500100
20	O type seal ring 6	YR20363000000	41	Water flow distributor support	YW20004700000
21	Clapboard	BL26160500110	42	M6×12×3 locating screw at notching cylinder end	YW64006000100
22	Number label	YP31010000100 YP31010000700	43	Mini clamp nut (selective matching)	YW09001000000
23	O type seal ring 3	YR20236200000	44	M8 Nut	YW64080600000
24	O type seal ring 5	YR20562600000	45	M8×35 Inner hexagon screw	YW61083500000

\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested. Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

## 2.2.9 Assembly Drawing (SFR-1000)

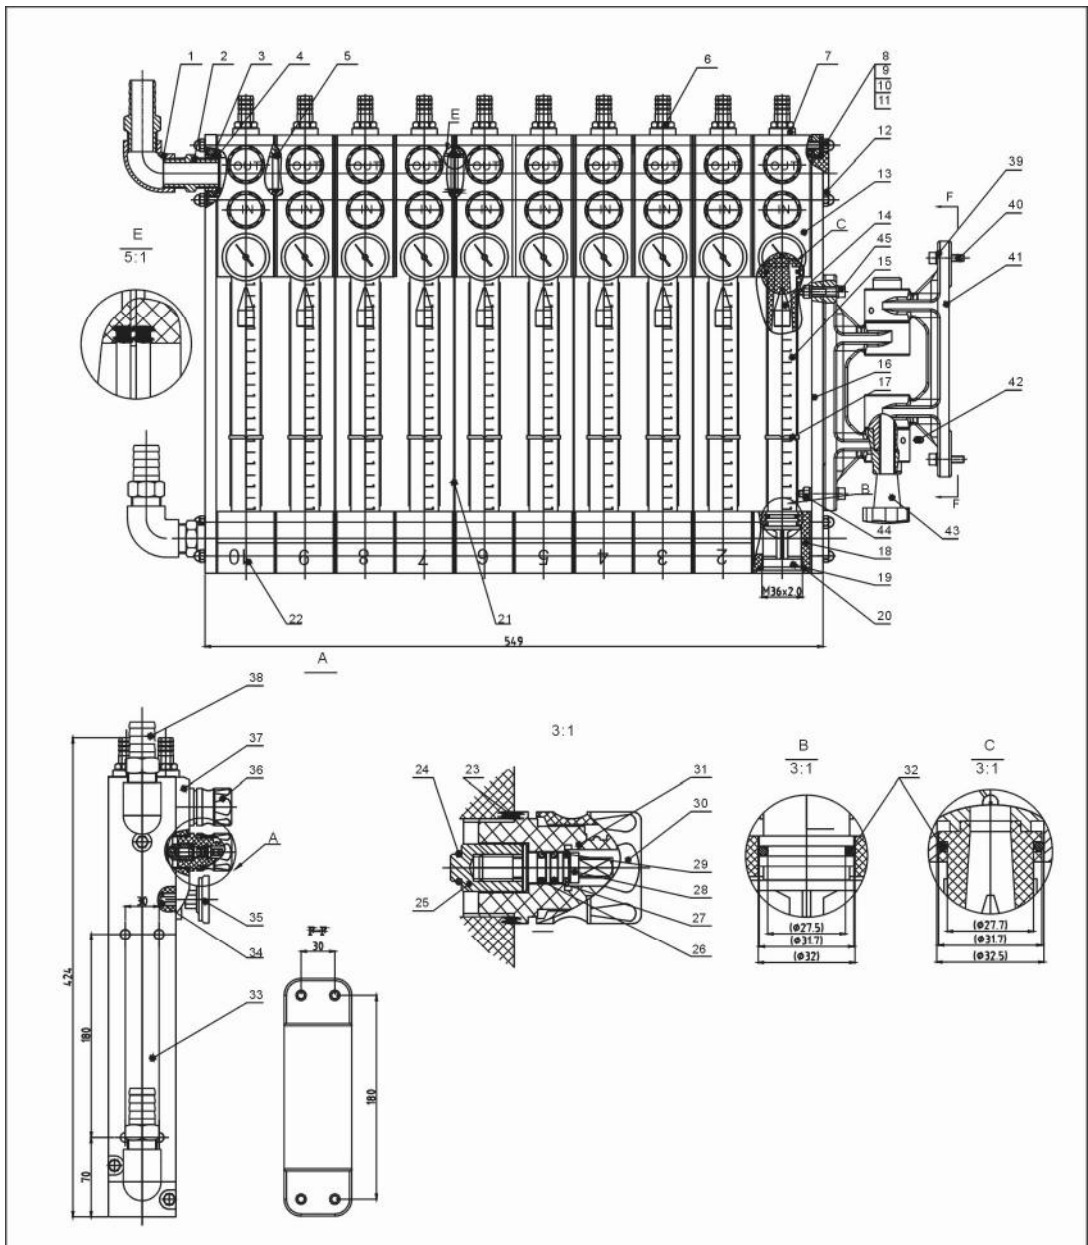

Technical requirements:

1. No mixed use of various O type rings is allowed in assembling.
2. Face direction is that the pointed end faces valve body.
3. Zero installation graduation of transparent collet is on valve body.
4. Test water and find out no water leakage in every sealing place after assembling in accordance with regulations.
5. Adjust knob, flexible and reliable.

Remarks: please refer to material list 2.2.10 for specific explanation of the Arabic numbers in parts drawing.

Picture 2-6: Assembly Drawing (SFR-1000)


## 2.2.10 Parts List (SFR-1000)

Table 2-5: Parts List (SFR-1000)

No.	Name	Part No.	No.	Name	Part No.
1	3 / 4" Stainless steel elbow (selective matching )	YW53030400000	25	Regulator block	YW05040000400
2	3 / 4" Copper connection with external teeth at the two ends (Selective matching)	BH12030400010	26	O type seal ring 7	YR20052500000
3	Fixing ring of plinth	BH12040000710	27	O type seal ring 4	YR20062000000
4	O type seal ring 1	YR20283500000	28	Regulator inner lever	YW05040000300
5	Rectangular seal ring	YR20401000000	29	Split washer	YW66000600000
6	3 / 8" Pipe's connection	YW04135300000	30	Regulator screw cap (IN)	YR40000000700
7	Valve body attachment's internal race	BH12400001210	31	Regulator fixing seat	YR40000000500
8	Full double-screw bolt	BH10624000010	32	O type seal ring 2	YR20273000000
9	Flap gasket	YW66061800000	33	Right fixing plate	BW20040000410
10	Spring washer	YW65006000100	34	4" Single-pore rubber plug	YR30000400100
11	Acorn nut	YW64006000100	35	Bimetallic thermometer	YE90101100000
12	Seal screw	YR40000000900	36	Regulator screw cap (OUT)	YR40000000800
13	Valve body	YR40004000000	37	Lateral mass	YR40000000600
14	Face	YW04143500000	38	3 / 4"PT×1/2 copper core (selective matching)	BH12341200010
15	Transparent collet	YR40000001100		3 / 4"PT×3/4 copper core (selective matching)	BH12343400010
16	Right fixing plate	BW20040000310		3 / 4"PT×1 copper core (selective matching)	BH12340100010
17	Collet measuring scale	YW20004700000		3 / 4"PT×3/8 copper core (selective matching)	BH12343800010
18	Connection base	YR40000001000	39	M8 Tapping screw	YW66081600000
19	Screw thread adjustment parts	YR40000001300	40	M8X25 Inner hexagon screw	YW61082500100
20	O type seal ring 6	YR20363000000	41	Water flow distributor support	YW20004700000
21	Clapboard	BL26160500110	42	M6×12×3 locating screw at notching cylinder end	YW64006000100
22	Number label	YP31010000100 YP31010000900	43	Mini clamp nut (selective matching)	YW09001000000
23	O type seal ring 3	YR20236200000	44	M8 Nut	YW64080600000
24	O type seal ring 5	YR20562600000	45	M8×35 Inner hexagon screw	YW61083500000

\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested. Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

## 2.2.11 Assembly Drawing (SFR-1200)

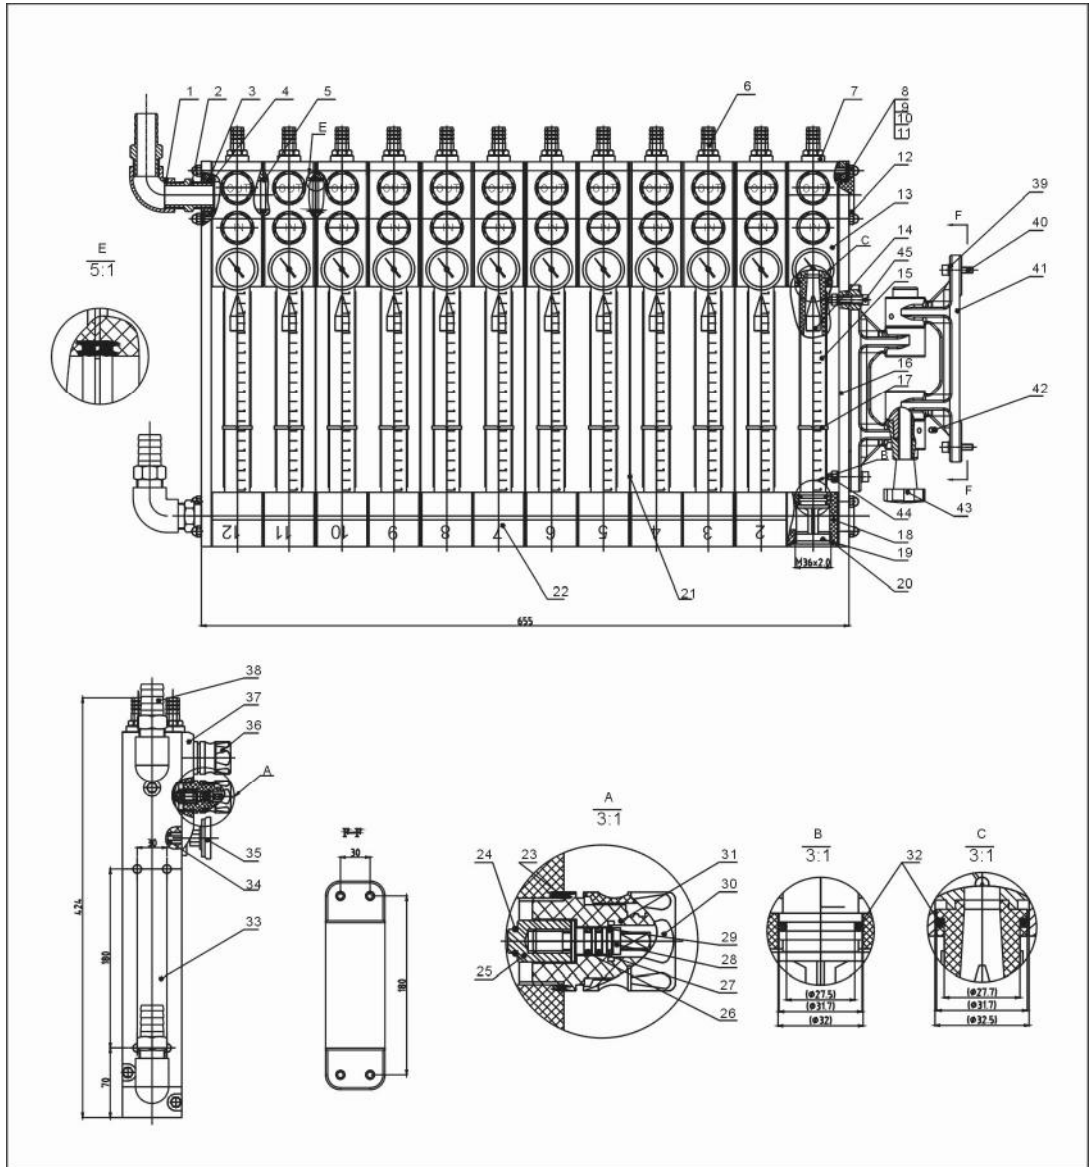

### Technical requirements:

1. No mixed use of various O type rings is allowed in assembling.
2. Face direction is that the pointed end faces valve body.
3. Zero installation graduation of transparent collet is on valve body.
4. Test water and find out no water leakage in every sealing place after assembling in accordance with regulations.
5. Adjust knob, flexible and reliable.

Remarks: please refer to material list 2.2.12 for specific explanation of the Arabic numbers in parts drawing.

Picture 2-7: Assembly Drawing (SFR-1200)

## 2.2.12 Parts List (SFR-1200)

Table 2-6: Parts List (SFR-1200)

No.	Name	Part No.	No.	Name	Part No.
1	3 / 4" Stainless steel elbow (selective matching )	YW53030400000	25	Regulator block	YW05040000400
2	3 / 4" Copper connection with external teeth at the two ends (Selective matching)	BH12030400010	26	O type seal ring 7	YR20052500000
3	Fixing ring of plinth	BH12040000710	27	O type seal ring 4	YR20062000000
4	O type seal ring 1	YR20283500000	28	Regulator inner lever	YW05040000300
5	Rectangular seal ring	YR20401000000	29	Split washer	YW66000600000
6	3 / 8" Pipe's connection	YW04135300000	30	Regulator screw cap (IN)	YR40000000700
7	Valve body attachment's internal race	BH12400001210	31	Regulator fixing seat	YR40000000500
8	Full double-screw bolt	BH10624000010	32	O type seal ring 2	YR20273000000
9	Flap gasket	YW66061800000	33	Right fixing plate	BW20040000410
10	Spring washer	YW65006000100	34	4" Single-pore rubber plug	YR30000400100
11	Acorn nut	YW64006000100	35	Bimetallic thermometer	YE90101100000
12	Seal screw	YR40000000900	36	Regulator screw cap (OUT)	YR40000000800
13	Valve body	YR40004000000	37	Lateral mass	YR40000000600
14	Face	YW04143500000	38	3 / 4"PT×1/2 copper core (selective matching)	BH12341200010
15	Transparent collet	YR40000001100	39	3 / 4"PT×3/4 copper core (selective matching)	BH12343400010
16	Right fixing plate	BW20040000310	40	3 / 4"PT×1 copper core (selective matching)	BH12340100010
17	Collet measuring scale	YW20004700000	41	3 / 4"PT×3/8 copper core (selective matching)	BH12343800010
18	Connection base	YR40000001000	42	M8 Tapping screw	YW66081600000
19	Screw thread adjustment parts	YR40000001300	43	M8X25 Inner hexagon screw	YW61082500100
20	O type seal ring 6	YR20363000000	44	Water flow distributor support	YW20004700000
21	Clapboard	BL26160500110	45	M6×12×3 locating screw at notching cylinder end	YW64006000100
22	Number label	YP31010000100 YP31010001100	46	Mini clamp nut (selective matching)	YW09001000000
23	O type seal ring 3	YR20236200000	47	M8 Nut	YW64080600000
24	O type seal ring 5	YR20562600000	48	M8×35 Inner hexagon screw	YW61083500000


\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested. Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

### 3. Installation and Debugging

Read this chapter carefully before installation. Install as following orders to avoid any accident!

#### 3.1 Installation Notice

- 1) Water flow distributor must be installed vertically on vibrate free pipe without any evident slope, its installation height should facilitate the float scale reading, and the line of sight should be in level with float. The circulating water runs through the distributor from top to bottom.
- 2) The max. Flow rate of the water inlet should be less than the max. processing rate ( max. Flowrate for each pipe is 18L / min).
- 3) Refer to the installation method in the following chart while selecting forming machine's support and main inlet-and-outlet connection. Use screws in attachment to fix forming machine's support 1 on injection machine's template, install forming machine's support 1 on the top of forming machine's support 1 and lock it tightly with clamp nut, and use screws in attachment to fix water flow regulator and forming machine's support 2 tightly.
- 4) It is necessary to connect with other pipes for distributary circulation when water flow requirement of mould is less than that in water inlet. (Refer to the following chart)

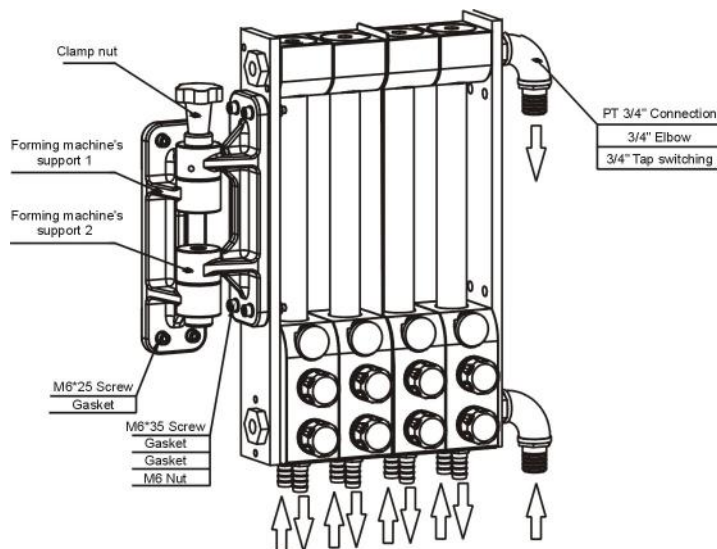

Picture 3-1: Installation Notice

- 5) May need to mount water purifier at the water inlet if it is using water that contains much impurities.
- 6) The pressure of the circulating water needs to be stable or it will cause the float fluctuation and incorrect readings.




Only applicable to purified water not for any other liquid or gas.

## 4. Operation Guide

### 4.1 Flowrate Adjusting

Water distributor adjusts the flowrate via two adjusting valves. When adjusting flowrate, first pull up the valve as indicated by the figure, turn clockwise to decrease the flowrate while increase its flowrate by turning it anticlockwisely. Press down the adjusting valve when finish.

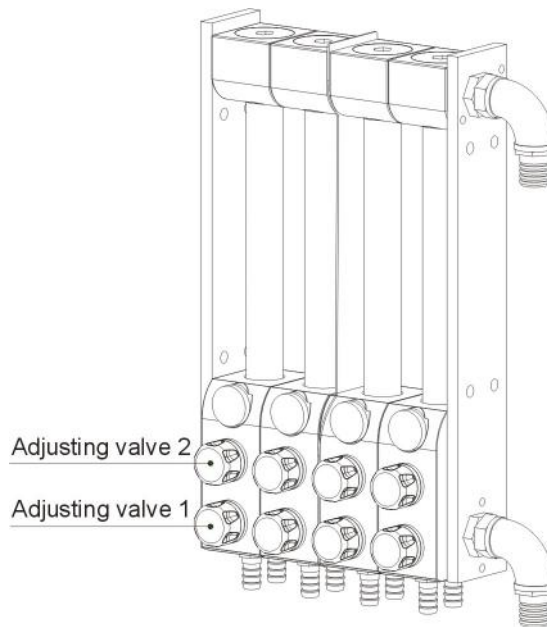

Picture 4-1: Flowrate Adjusting



The adjusting valve may not be able to adjust when it is pressed down.

## 5. Trouble-shooting

Failures	Possible reasons	Solutions
Water leakage.	The nut has not been locked up. The seal ring is damaged. Too high water pressure.	Tighten up the screw. Change the seal ring. Reduce water pressure.
Incorrect temp.	Thermometer is damaged. Furring in thermometer.	Change the thermometer. Furring in thermometer.
Can not adjust flowrate.	Valve fails. Pipe clog.	Change valve. Clean the pipeline.
Incorrect flowrate display.	Great abrasion on float. Furring on float and plastic pipe.	Change float. Clean furring.

## 6. Maintenance and Repair

All stuff concerning repair must be conducted by professionals to avoid machine damage or harm to human body.

### 6.1 Clean the Furring

There are furring gathered around the float and plastic pipe after using for a while, so please check periodically. If incorrect flowrate is found, please clean the furring on float by using sand paper or cloth, while use pipe brush to clean the plastic pipe.

## 6.2 Maintenance Schedule

### 6.2.1 About the Machine

Model: \_\_\_\_\_ SN: \_\_\_\_\_ Manufacturing date: \_\_\_\_\_

### 6.2.2 Installation Check

- Inspect if transparent collet is cracked.
- Check to see if the joint has been connected.
- Check if there is any water leakage.
- Inspect if water flow regulation valve works in normal state
- Check the thermometer to see if it can work normally.

### 6.2.3 Daily Check

- Inspect if water flow regulation valve works in normal state.
- Check the thermometer to see if it can work normally.
- Check if there is any water leakage.

### 6.2.4 Weekly Check

- Inspect if there is furring in bobber and transparent collet.